



REAR AUX LIGHT KIT

FOR CHEVY & GMC TRUCKS

PLEASE READ ENTIRELY BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

INCLUDED PARTS	QTY	REQUIRED TOOLS
Aux Light Bracket RH	1	Common Hand Tools
Aux Light Bracket LH	1	
Hardware Pack	1	

These brackets are designed for use with Baja Designs Squadron 3" Light, SKU 550003



1. Remove the Inner Bezel from the rear bumper by pulling it off (fig. 1).

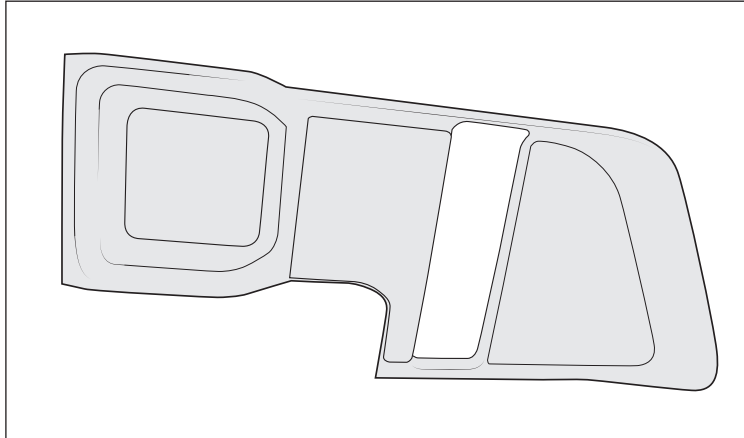


Figure 1

2. Remove the aux light cover via the clips on the backside of the bezel (fig. 2).

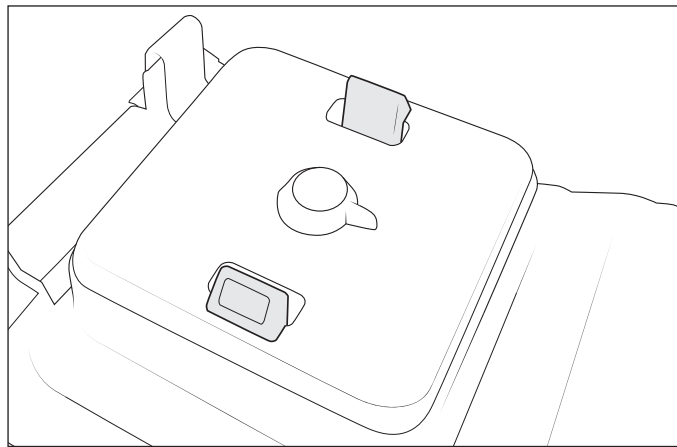


Figure 2

3. Trim the inner bezel along the line pictured below (fig. 3).

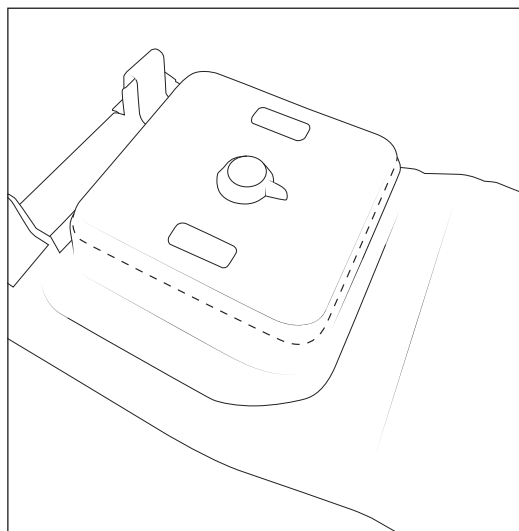


Figure 3



4. Insert the supplied U-Nuts into the bumper as shown (fig. 4).

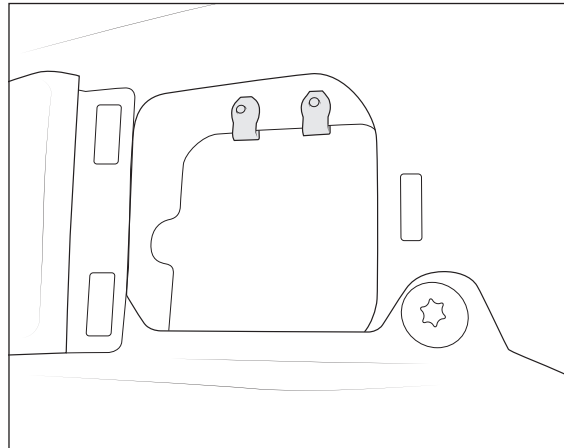


Figure 4

5. Install the AEV bracket onto your desired light (fig. 5). NOTE: AEV recommends Baja Design Squadron 3" light (PN 550003).

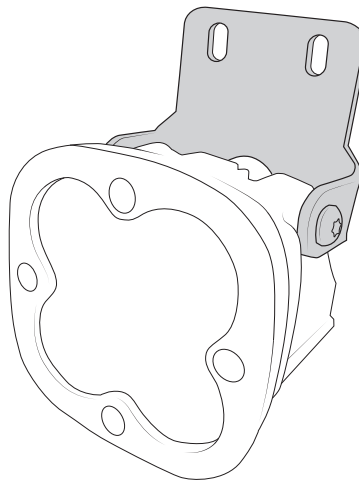


Figure 5

6. Using the provided screws, secure the light bracket to the bumper (fig. 6).

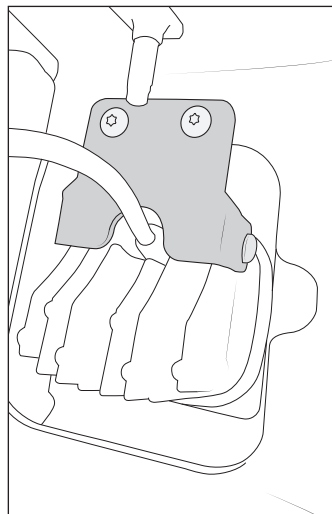


Figure 6



7. Press the inner bezel back into place ensuring each clip is secured (fig. 7).

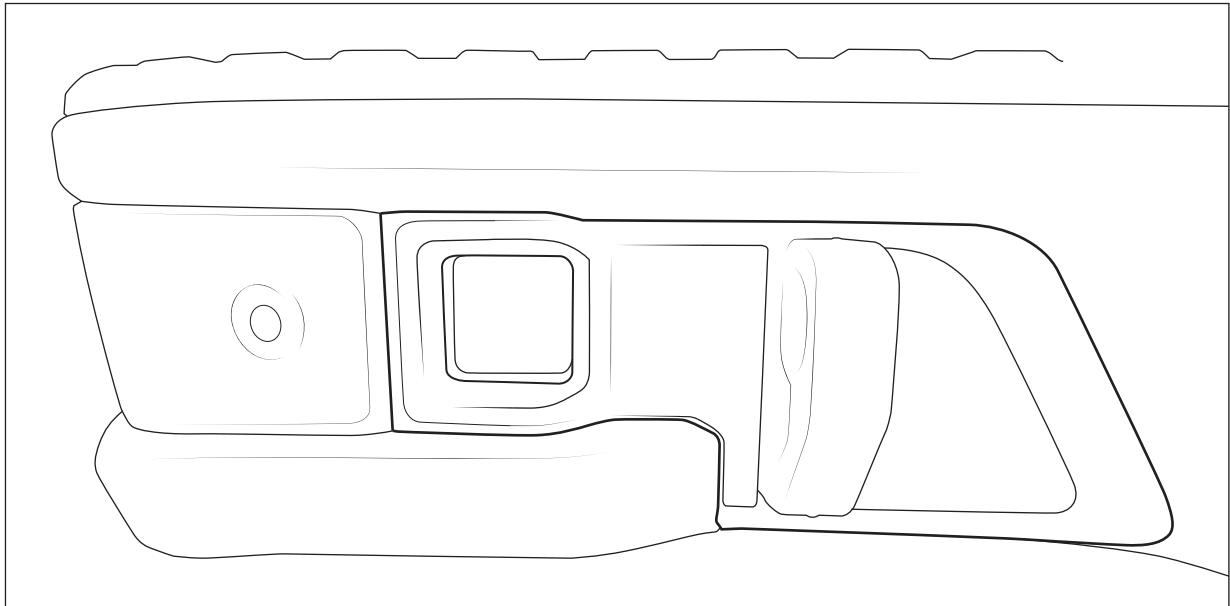


Figure 7